PREMIER®

MANUAL DE INSTRUCCIONES
EXTRACTOR DE JUGOS
ED-4899

ESTIMADO CLIENTE

Con el fin de que obtenga el mayor desempeño de su producto, por favor lea este manual de instrucciones cuidadosamente antes de comenzar a utilizarlo, y guárdelo para su futura referencia.
Si necesita soporte adicional, no dude en escribir a: ***info@premiermundo.com***

ÍNDICE

DESCRIPCIÓN 2
CARACTERÍSTICAS 2
DESEMPEÑO 3
ANTES DE UTILIZAR LA UNIDAD 3
EXTRACTAR JUGO 3
TIEMPO DE OPERACIÓN 3
INSTRUCCIONES DE SEGURIDAD 4
LIMPIEZA Y MANTENIMIENTO 4
DIAGRAMA DE CIRCUITOS 4

PRECAUCIÓN

RIESGO DE CHOQUE ELÉCTRICO , NO ABRA

Precaución: Para reducir el riesgo de choque eléctrico, no retire la cubierta, no hay partes manipulables por el usuario al interior de la unidad. Refiera todo mantenimiento o intervención técnica a personal técnico calificado.

Este símbolo indica la existencia de voltaje peligroso al interior de esta unidad, que constituye un riesgo de choque eléctrico.

Este símbolo indica que hay importantes instrucciones de operación y mantenimiento en la literatura que acompaña a esta unidad.

LÍNEAS DE SERVICIO AL CLIENTE PREMIER

Venezuela:	0800 – ELECTRIC (353-2874)
Panamá:	300-5185
Sitio Web:	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

NOTA
Nos reservamos el derecho de modificar las especificaciones, características y/u operación de este producto sin previo aviso, con el fin de continuar las mejoras y desarrollo del mismo.

DESCRIPCIÓN

1. Empujador
2. Tapa transparente
3. Filtro
4. Anillo mediano
5. Pico anti-goteo
6. Manija
7. Unidad del motor
8. Perilla
9. Contenedor de pulpa
10. Jarra para el jugo

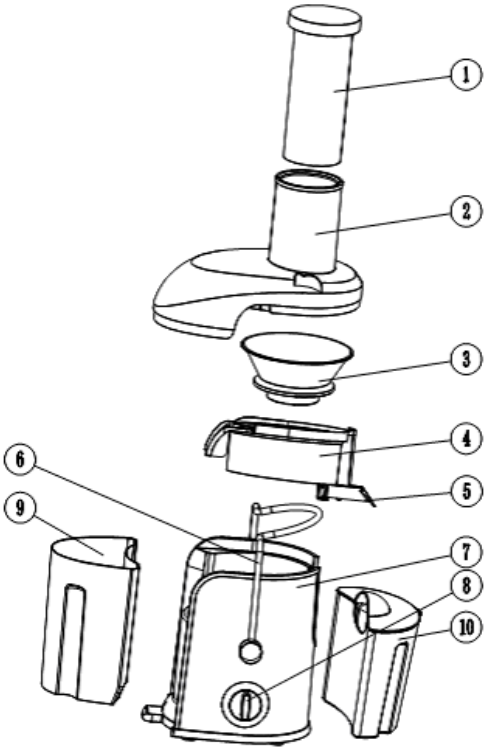

CARACTERÍSTICAS

- Diseño compacto y sencillo.
- Se puede utilizar con variedad de frutas como manzanas, zanahorias, peras, etc.
- Piezas desarmables para lavar fácilmente.
- Patas de caucho antideslizantes.
- Contenedor de pulpa de 1.5 litros y jarra para el jugo de 750 ml.
- Carcasa en acero inoxidable.
- Cuchilla de acero inoxidable.
- Control de 2 velocidades.
- Protector de sobrecarga con un motor de 600 W de potencia y un dispositivo de bloqueo de seguridad.
- Voltaje: AC 220V, 50/60Hz. Potencia: 600W

1. Abra la boquilla con resorte en la unidad

2. Ajusta la jarra con la boquilla

3. Asegure ambas piezas con el cierre

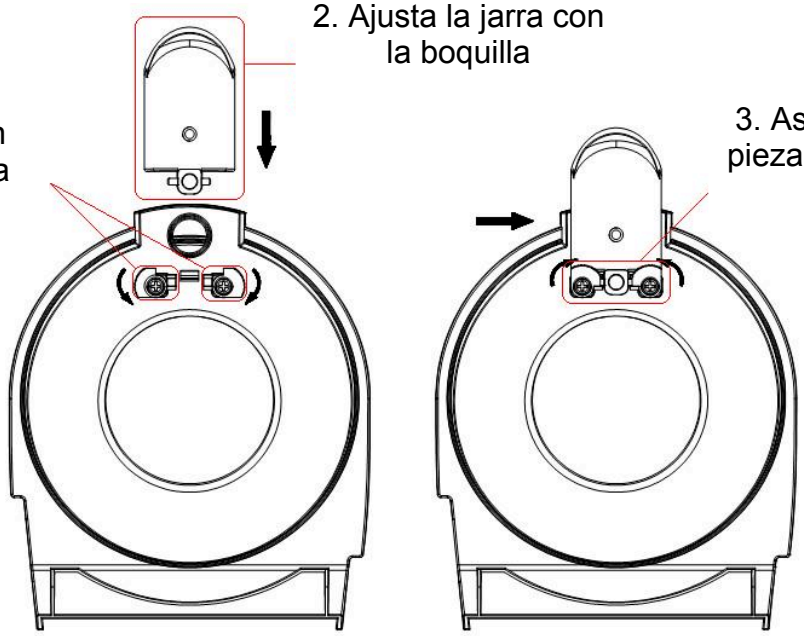

DESEMPEÑO

- Si el diámetro de la boquilla de entrada del extractor es lo suficientemente grande, usted puede colocar una fruta entera, como por ejemplo una manzana o una pera sin necesidad de cortarla en pedazos más pequeños.
- El motor eléctrico de alta velocidad con protección de sobrecarga funciona de manera eficiente ahorrándole tiempo y consumo de energía, al mismo tiempo que cuenta con una larga vida de operación.
- El cierre de seguridad está especialmente diseñado para una operación más segura y confiable.
- El pico de salida puede colocarse hacia abajo o hacia arriba para controlar la salida del jugo cuando la jarra esté llena.

ANTES DE UTILIZAR LA UNIDAD

- La unidad cuenta con un dispositivo de seguridad de tal forma que si la manija no se encuentra unida a la tapa o la base de corte no está unida, el motor no encenderá, con el fin de proporcionar mayor seguridad al usuario.
- Para desarmar la unidad presione el puerto de alimentación de la tapa con su mano, y luego a la fuerza a la manija para soltar la tapa.
- Al desarmar el filtro retire primero la tapa y el contenedor de pulpa, luego gire el anillo de la mitad a 30° sosteniendo el pico del jugo con su mano, y hale hacia arriba, y el filtro saldrá automáticamente del rotor.
- Con el fin de evitar daños verifique que el voltaje de la unidad corresponde con el del área donde la va a conectar.
- Limpie todas las partes que se puedan desarmar.

EXTRACTAR JUGO

1. Antes de comenzar a utilizar la unidad asegúrese que el interruptor se encuentre en la posición de apagado.
2. Asegúrese que el filtro y el rotor se encuentren en posición fija y no haya contacto entre el cortador y la tapa transparente. Coloque la tapa encima. Coloque la manija en la ranura de la tapa y encienda la unidad.
3. Permita que la unidad funcione sin frutas al menos 5 segundos. Coloque las frutas y los vegetales en el puerto de alimentación y presione con el empujador de manera firme y lentamente. El jugo saldrá adecuadamente, listo para ser consumido. (Aplique una fuerza que no sea excesiva con el fin de no afectar la cantidad de jugo que se puede extractar, al igual que para proteger la unidad.)

TIEMPO DE OPERACIÓN

La unidad está diseñada con un control de dos velocidades. La posición 0 es apagado, la posición I es velocidad lenta, y la posición II velocidad alta. Para extractar jugo seleccione la velocidad alta y manténgala durante 1 minuto. Luego permita que la unidad descanse por 1 minuto. Cuando repita esta operación 3 veces, permita que la unidad descanse por 15 minutos. De esta manera usted extiende la vida útil del motor y hace que el desempeño sea más eficiente.

INSTRUCCIONES DE SEGURIDAD

- La unidad no debe ser utilizada por personas con capacidades físicas o mentales reducidas.
- Mantenga la unidad fuera del alcance de los niños.
- Coloque la unidad sobre una superficie plana y estable.
- Antes de hacer la extracción de jugos asegúrese de que la unidad está armada correctamente.
- Al utilizar la unidad por vez primera es probable que se perciba un olor particular. Esto es normal. Después de varios usos el olor desaparecerá.
- Mientras utiliza la unidad asegúrese de que no hay demasiado jugo y residuos en la parte media y los contenedores. De ser así, evacúe un poco y vuelva a utilizar.
- No abra la tapa mientras esté utilizando la unidad.
- Con el fin de prolongar la vida útil del motor, tenga en cuenta hacer pausas entre cada proceso para permitir que el motor se enfríe.
- Al terminar de utilizar la unidad, desconecte primero el cable de poder antes de retirar los alimentos.
- Recuerde que las cuchillas están muy afiladas. Tenga precaución al lavarlas. Preferiblemente, colóquelas bajo el agua que corre de la llave.
- No utilice la unidad para un propósito diferente para el cual fue diseñada.
- En caso de que observe alguna falla en la unidad o en el cable de poder no utilice la unidad.
- No introduzca los alimentos con los dedos. Si la unidad se atora utilice el empujador. Si esto no funciona, apague la unidad, desconéctela y desármela para solucionarlo manualmente retirando la comida.
- No intente reparar la unidad usted mismo. Remita toda revisión, mantenimiento y reparación a personal de servicio técnico calificado.

LIMPIEZA Y MANTENIMIENTO

- No introduzca la unidad en agua, particularmente la unidad del motor. Al limpiarla utilice una prenda húmeda suave. Los componentes que se pueden desarmar se pueden lavar con agua fácilmente. (Empujador, tapa, anillo medio, contenedor de pulpa, etc.)
- Algunas frutas y vegetales, como por ejemplo la zanahoria, pueden causar que el color del plástico cambie. Se puede evitar este cambio lavando oportunamente las partes de la unidad profundamente.

DIAGRAMA DE CIRCUITOS

Voltaje AC 220V, 50/60Hz
Potencia 600 W

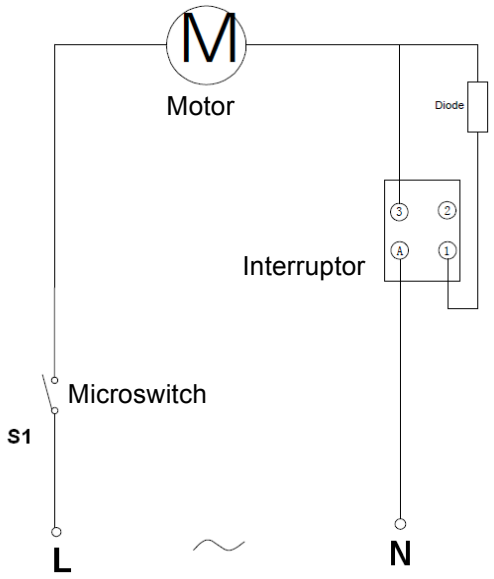

PREMIER®

INSTRUCTION MANUAL

JUICE EXTRACTOR

ED-4899

DEAR CUSTOMER

In order to achieve the best performance of your product, please read this instruction manual carefully before using, and keep it for future reference.

If you need extra support, please write to ***info@premiermundo.com***

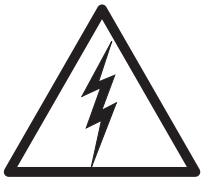

CAUTION

RISK OF ELECTRIC SHOCK, DO NOT OPEN

Caution: To reduce the risk of electric shock do not open this device, there are not serviceable parts for customers. Please refer any maintenance or repair to qualified personnel.

This sign means the existence of dangerous voltage at the inside of the unit, which states a risk of electric shock.

This sign means that there are important instructions of operation and handling in the manual that comes with this device.

PREMIER CUSTOMER SERVICE

Venezuela:	0800 – ELECTRIC (353-2874)
Panama:	300-5185
Website	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

NOTE
This unit may be submitted to changes in specifications, characteristics and/or operation without prior notice to the user, in order to continue improving and developing its technology.

Please read all instructions carefully before using

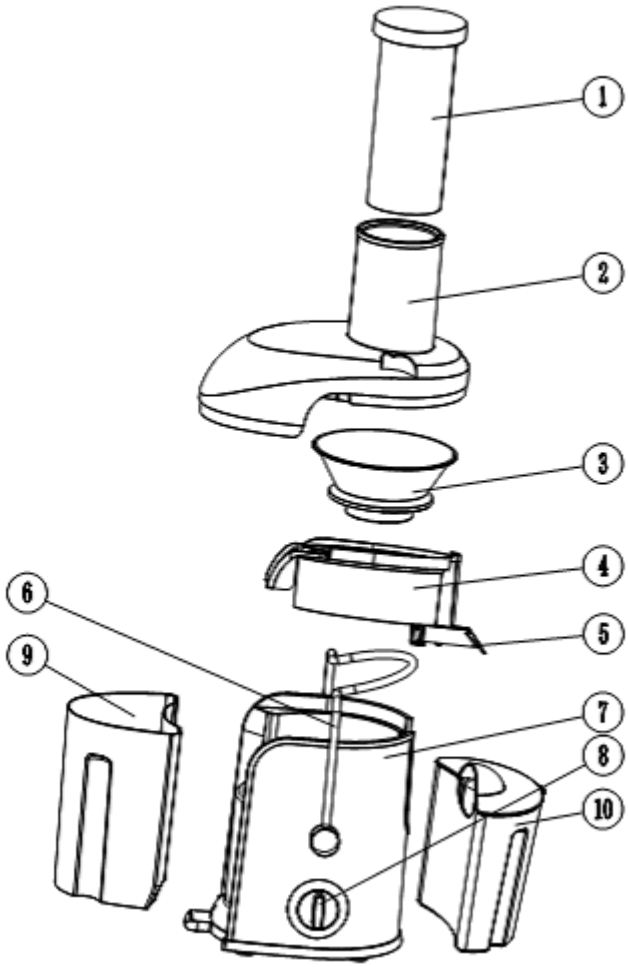

PARTS NAME

1. Pusher
2. Transparent cover
3. Filter
4. Middle ring
5. Anti-drop spout
6. Handle
7. Motor unit
8. knob
9. pulp container
10. juicer jug

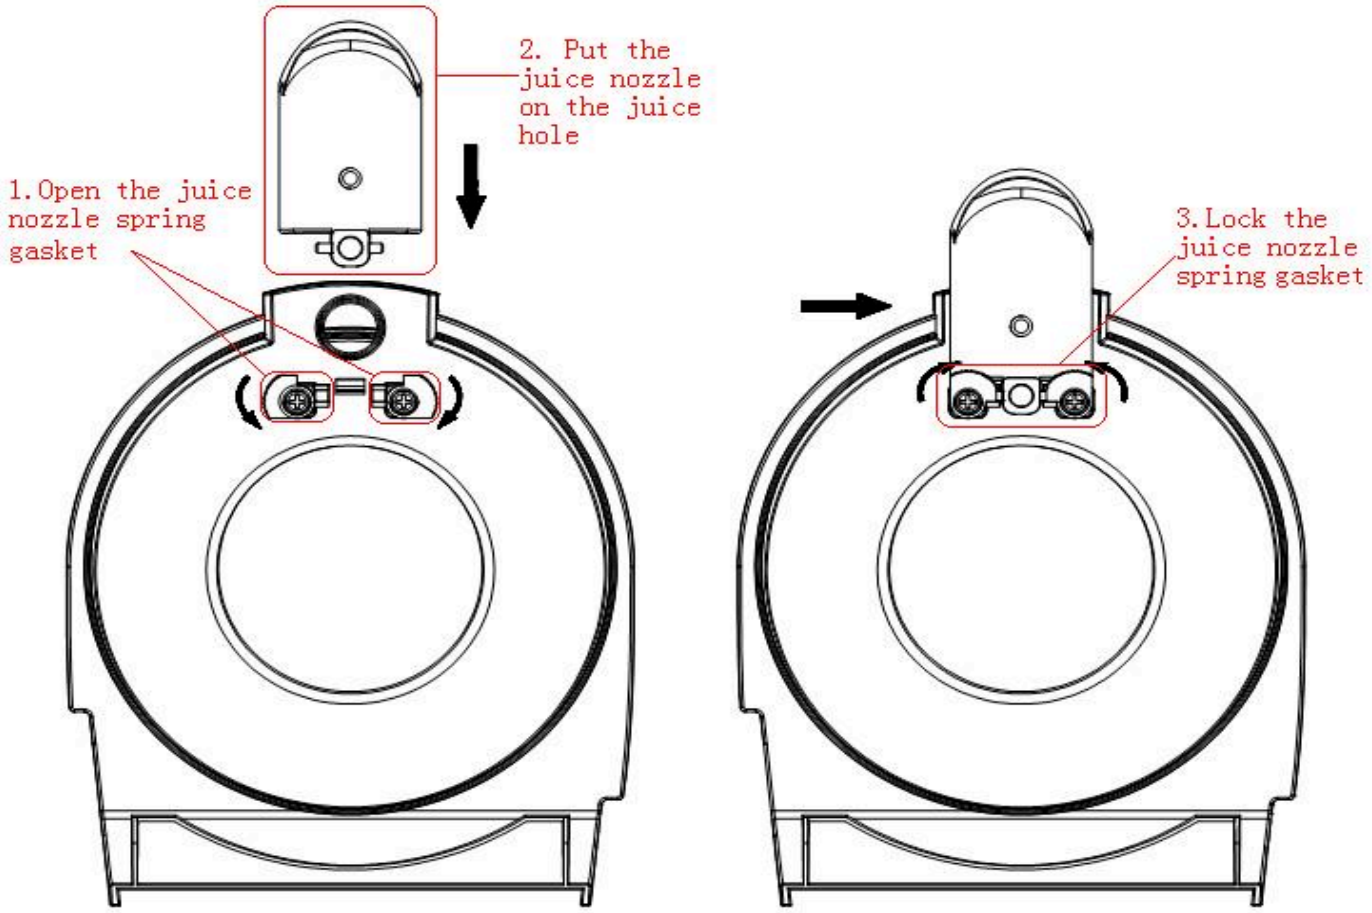

- Mini, simplicity and rich in streamline design
- Available for juicing apple, carrot, pear etc
- Unique anti-drop can detachable and safely by dish washer
- Non-slip rubber feet & anti-drop spout
- 1.5Lpulp container & 750ml juice cup
- Stainless steel housing
- Stainless steel blade assembly
- Two speed control section
- Overheat protector on 600W powerful motor and safety lock device
- AC220V, 50/60Hz, 600W

PERFORMANCES

1. For the juicer with large diameter, entire apple or pear can be put in for juicing, no cutting apart needed, easy and quick.
2. Design in fine, simple, and beautiful, with combined structure, easy to operate and clean.
3. High speed electric motor with overheating protection is adopted, high efficiency, time saving , energy saving ,high service life of the motor.
4. Safety lock unit for switching is specially designed, in order to make sure safety and reliability in use.
5. The spout is active, up or down to stop the juice come out when the cup is full

ATTENTION BEFORE USING

1. This machine is set with safety unit, when the handle does not fasten the cover or the cutter seat is not fastened, the motor cannot turn, so as to ensure safety for the user.
2. When disassembling or assembling the juicer, press the upper of feed port of the cover with your hand, then force the handle to slide in or out of cover slot.
3. When disassembling filter first remove the cover and pulp container , then turn the middle ring up to 30 degrees by holding juicing spout with your hand ,and take up , the filter will automatically leave the rotor
4. In order to avoid damage, before using, first check power supply for compliance with rate voltage.
5. Clean all parts able to disassemble (refer to the section of “maintenance and cleaning”).
6. When assembling, please carefully read the diagram of “name and position of main components”.
7. Please carefully rend the “attention” before using.

JUICING

1. Before using, please confirm the button switch of the main machine in stop state, in this way, in case assembly is not completed, starting the main machine can be avoided, so unnecessary damage for persons or property avoided.
2. Before juicing, first confirm filter and rotor clutched in position, and no hard contact between filter cutter and transparent cover. Put the transparent cover on. Put the handle into the cover slot, then turn on the machine.
3. For using, assemble according to the diagram of “name and position of main components”. Turn on power supply, press switch to let the machine run no-load foe 5sec. Put prepared vegetable or fruit into feed port of the juicer .press with the pushing bar, evenly, hard and slowly, juice of the vegetable or fruit can be found, original, fresh, good for health.
4. Note: when pressing food with the pushing bar, force shall be even or indirect, pressing force shall not be more than 1kg, no too sudden force, otherwise, juicing effect will be reduced.

OPERATING TIME

This machine is designed with button switches of O speed ,I speed ,II speed (0 for stop ,I for weak speed ,II for strong speed) For juicing , select strong speed for operating time ,after operating for 1 min stop for 1 min ,then use again ,After the above operation is performed for three times , stop for 15 min ,do not operate until the motor is cooled ,in this way ,service lift of this machine will be prolonged , the machine will serve you more efficiently

ATTENTIONS

1. This machine is unavailable for the weakness, unresponsive or psychopathic person (including children), unless under the direction or help from the person who have the responsibility for security. Children should be overseen, so it can be testified that they are not playing with it.
2. Before using, put this machine on a stable and even table board, operate according to the above methods
3. Before juicing, first confirm juicing net and rotor clutched in position, and no hard contact between juicing net cutter and transparent cover. Put the transparent cover on, fasten tight the handle, then turn on the machine
4. Before being used, the motor works in running –in phase, there may be slight peculiar smell and spark, this is normal, after the motor works for some period, the above phenomenon will disappear

5. During juicing, make sure there is not too full juice and residue in the middle seat and residue cup, if too full, please cut off power supply ,clean up ,then use again
6.During using ,do not open the cup cover, in case power supply is on ,do not put hand or any ware into the mixing cup or feed port, otherwise ,harmful accident may occur or this machine may be damaged
7. In order to prolong service life of this machine ,over-temperature protective device is mounted in the motor ,If the motor works for a long time or overloaded, when over warning temperature ,power supply will automatically cut off. After the motor stops, pull out plug of power supply wait for the motor to cool (about for 30 min) use again .
8. During operating, please do not leave, never let children operate this machine
9. When this machine works in mixing, mincing or grinding conditions, no loaded or over loaded work is strictly prohibited.
10. After operation, do not pour the food out until pull out the plug of power supply.
11. Cutters are very sharp, in order to avoid danger, when cleaning a cutter, please put the cutter under water tap for washing, do not wash it with hand.
12. This machine must not be used for others beyond regulated purposes.
13. In case of damaged power cord, in order to avoid danger, replacement must be performed by the manufacturer or its service department or similar professional persons
14. Do not push products into the appliance by fingers while it is in operation .if food becomes lodged in feeder tube ,use pusher to push it down ,If this doesn't work ,turn the motor off , unplug unit , and then disassemble juice extractor to remove remaining food

MAINTENANCE AND CLEANING

1. This machine shall be often used, so as to keep the motor dry and clean
2. if not using for a long time ,please store this machine at a dry and well-ventilated place so as to prevent the motor from being damped and going moldy
3. No washing the main machine.When cleaning, only wipe with wet cloth. Other components may be washed directly with water, such as pusher ,cover, middle ring ,pulp container
4. Anti-drop spout , you can detachable and dishwasher safely
5. Some vegetables, such as carrots, may cause discoloration of the plastic .Reduce this by washing parts immediately after use with small amount of non-abrasive cleaner on a cloth ,rub gently ,then rinse well and dry

CIRCUIT DIAGRAM

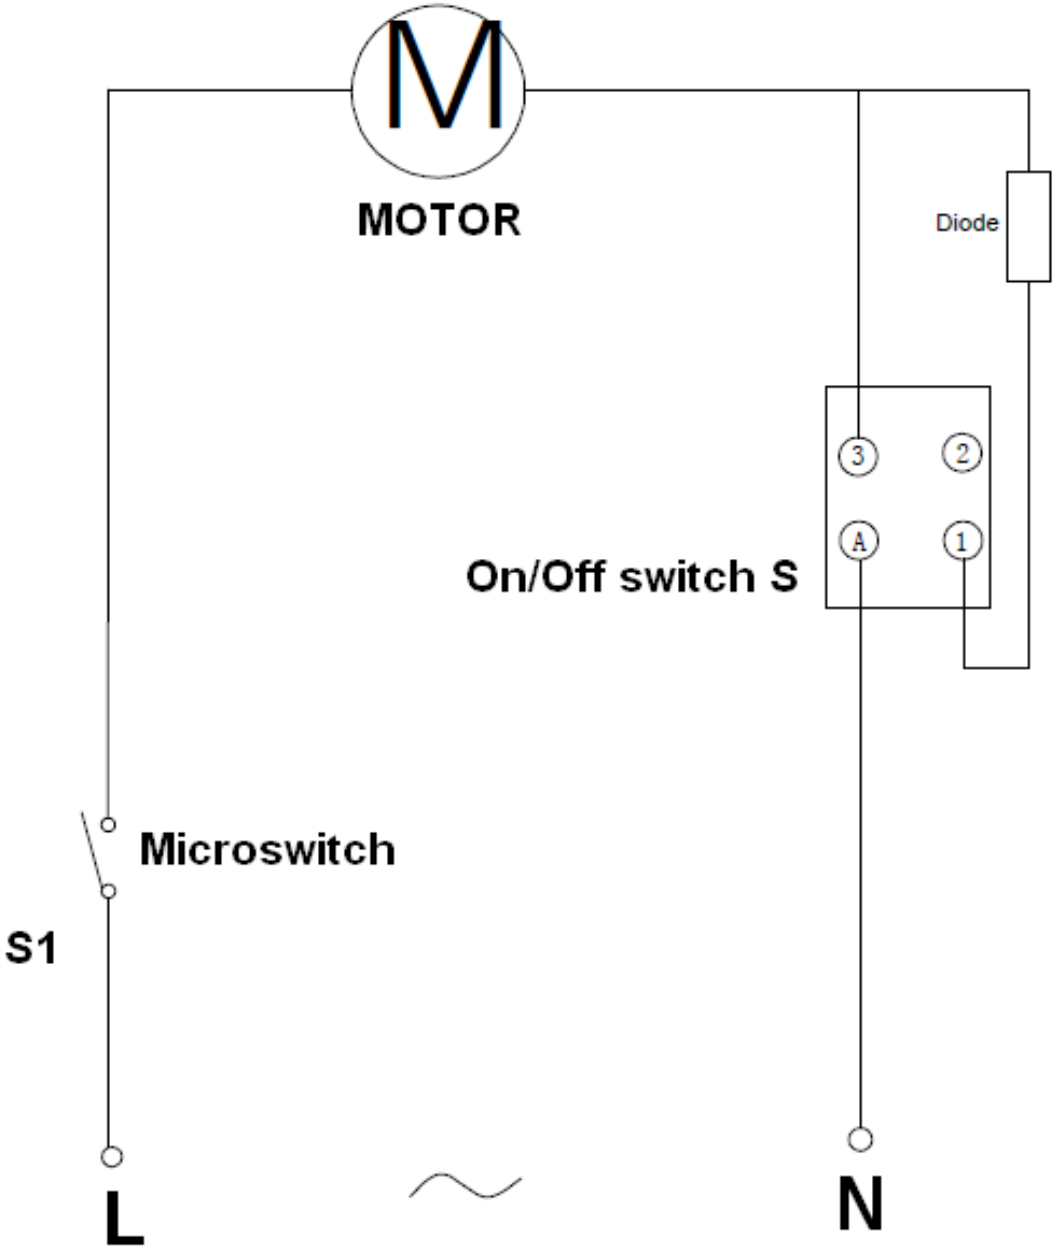

VOLTAGE : AC220V 50/60Hz, POWER : 600 WATTS